



 

 
 
 
 
 
 

User Manual

1. Make sure power is off before installation;
2. Copper line must be fully covered, then carry the power line to makesure it's fixed.
3. This manual is suitable for XTD-A series product.


1. Make the cut hole and then wiring.

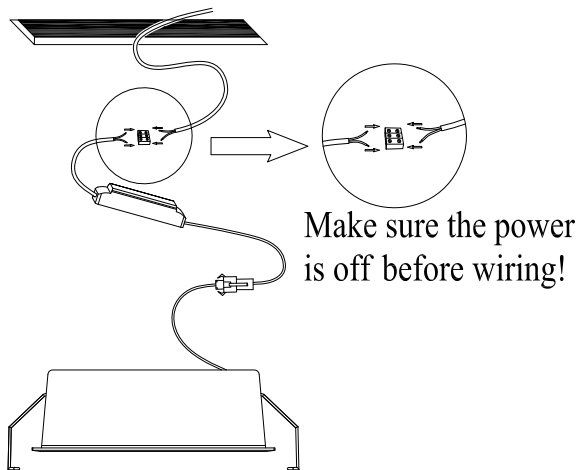


XTD-A Series cut hole table.

Item Number	Cut Hole
 XTD-A-01	 37*37MM
 XTD-A-02	 68*37MM
 XTD-A-05	 140*37MM
 XTD-A-10	 273*37MM
 XTD-A-15	 405*37MM

2. Installation.

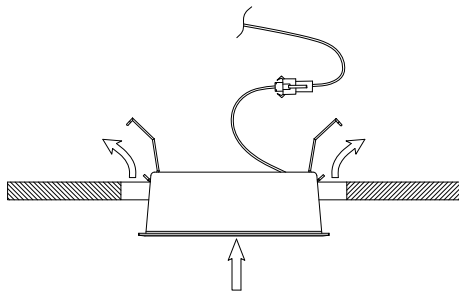

Pull up the spring and put the light into the cut hole.

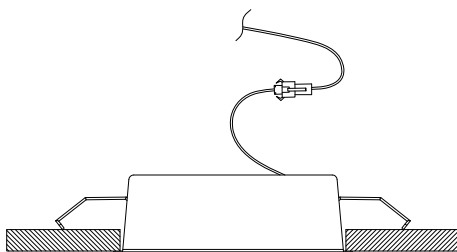

Installation complete.