

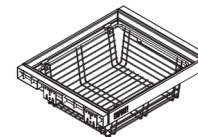
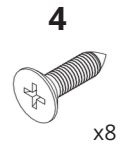
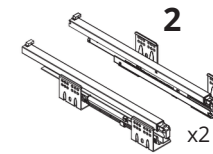
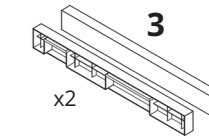



Accessories list:
Комплектующие:

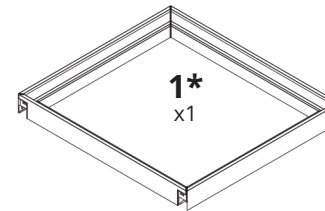


WIRE BASKET

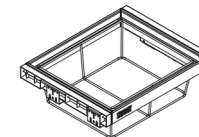


RATTAN BASKET

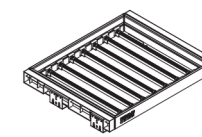


PULL-OUT TROUSER RACK

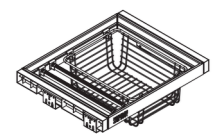


PULL-OUT TROUSER RACK + BASKET

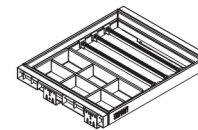


PULL-OUT TROUSER RACK + ORGANISER

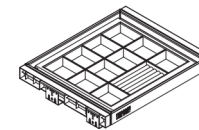


ORGANISER

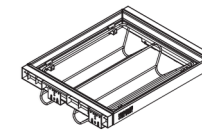


PULL-OUT SHOE RACK

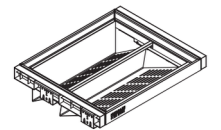


PULL-OUT SHOE RACK

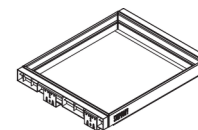

PULL-OUT SHELF


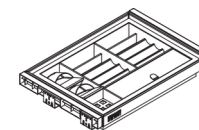


ORGANISER


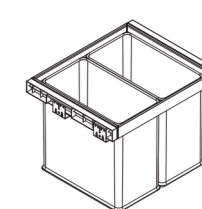


LAUNDRY BASKET

Technical drawing:
Установочные размеры:

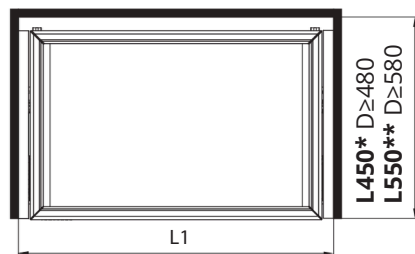
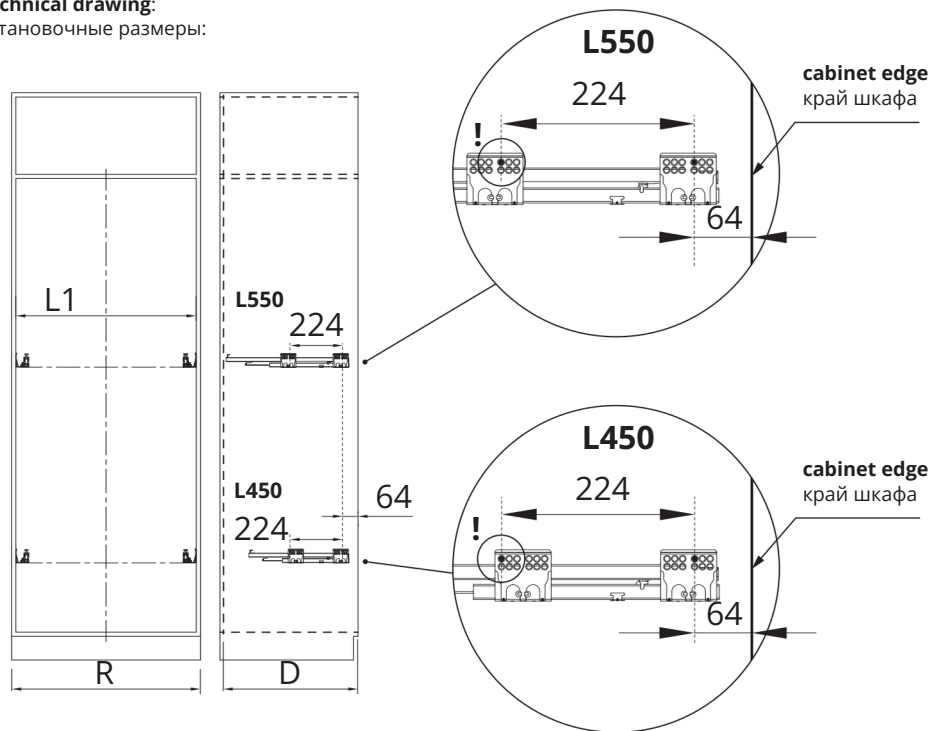


R Size Размер	L1 Internal Cabinet width Ширина шкафа	
	L1 min	L1 max
600	564	614
700	664	714
800	764	814
900	864	914

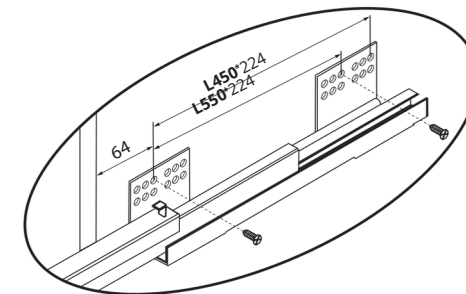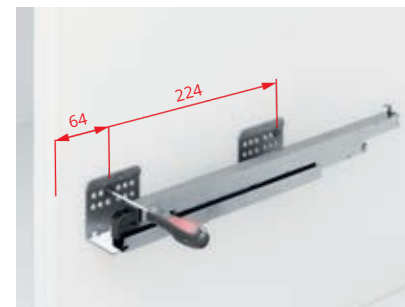

The frame is adjustable +50mm: If you need to use it, loosen the four screws (2 pcs on each side), then pull out frame to the required width like a drawing B.

Рама имеет регулировку +50 мм: Если вам нужно ее использовать, отпустите четыре винта (по 2 шт. с каждой стороны), затем разведите боковые части рамы до необходимой ширины, как на рисунке B.

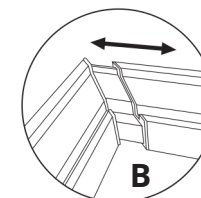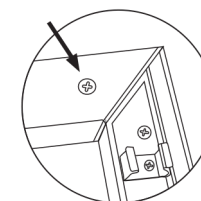

Set the frame at 30 degree angle to the rear slideshook, then press down on the front of the frame.
Подгоните раму под углом 30 градусов к заднему крюку направляющей, затем прижмите переднюю часть рамы

